

# **ZION DELUXE**

## **OPERATION MANUAL**



# ZION QUEEN

## PARTS DESCRIPTION



COLOR	White and Brown
VOLTAGE	220 V
NW/GW	55 kg / 65 kg
MEAS	117 x 75 x 106 cm

# SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using.

**DANGER – To reduce the risk of electric shock:**

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.

**WARNING – To reduce the risks of burns, fire, electric shock or injury to persons:**

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts
- Close supervision is necessary when this appliance is used by, on, or near children, or disabled persons
- Use this appliance only for its intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by the supply cord or use the cord as a handle. Keep the cord away from heated surfaces
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Keep children away from the extended foot support
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unsupervised use of heat by children or disabled persons may be dangerous
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

# SAFETY INSTRUCTIONS


## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock.

This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**Danger-**Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

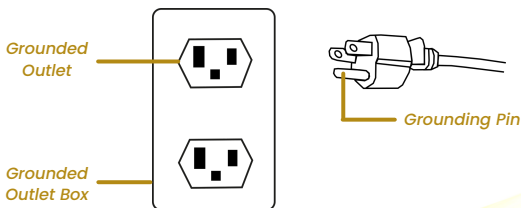

# SAFETY INSTRUCTIONS

## OPERATING SURROUNDINGS

Do not use or store the massage chair in a damp environment: i.e. bathroom, sauna, spa to avoid any mold, electric shock, fire or mechanical failure.

Do not use the massage chair outdoors.

Do not use the massage chair under dusty, smeary, or anoxic conditions.

Do not place the massage chair near a heater, stove, or near sunlight radiation to avoid inner components overheating and causing fire.

Make sure to place the massage chair on a flat level ground.

The bracket part should be placed on the plain ground.

To avoid electric shock, please make sure to connect an earth wire and have it grounded.

Don't use the machine while smoking.

## ***FOLLOWING CONDITIONS SHOULD CONSULT DOCTORS BEFORE USE***

- Suffered from malignant tumor
- Serious heart disease
- Serious skin disease
- Serious boned hyperplasia
- During pregnancy, be on the rest cure under the doctor's supervision
- If there is a bend in the back caused by an accident or disease
- Needing peaceful surroundings
- Arthritis Disease
- Implanted pacemaker for medical purpose
- Suffered from bowels disease (i.e. gastritis, entritis, diarrhea, hepatitis)
- Serious blood circulation trouble
- Consciousness trouble
- In hyperpyretic












*Children under the age of 18 or people with disabilities (physical and mental) are not allowed to operate the massage chair without a doctors consent to prevent cases of electric shock, injuries, or mechanism malfunctions.*

# SAFETY INSTRUCTIONS






*For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted.*

## CAUTIONS

-  Non-professional technicians are not allowed to dismantle or repair the chair to avoid fire, electrical shock or serious harm.
-  Do not spray or directly pour liquids to the switch when cleaning to avoid insulation fault, electrical shock or short-circuiting.
-  When moving the chair in the process of storing or maintenance, be sure to disconnect the power plug from socket. Do not detach the plug with wet hands
-  Make sure to shut off and detach the power plug when cleaning or storing product. During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock .
-  Do not place the machine onto an unstable surface to avoid roasting, insulation failure, electrical shock or turnover. When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking. Unexpected earthquake or external force may also cause damage or injury.
-  Clean power plug periodically to avoid fire due to dust.
-  Do not use it in any unsafe places or for other purposes. It is the main reason of product damage or accident.
-  Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.
-  The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

# SAFETY INSTRUCTIONS

## CAUTIONS

-  Do not store it near a fire or flammable substances. It is one of the reasons of causing product manipulation, deviation, or damage .
-  Should any abnormality occur(i.e. scorching smell), stop using immediately and detach power plug from socket. Operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance.
-  Only rated voltage must be used (220 V).
-  Be sure to keep children away during operating to avoid any hazard.
-  If the supply cord is damaged, it must be replaced by the manufacturer or its authorized persons for repair or maintenance to avoid any hazard.

# SAFETY INSTRUCTIONS

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement. The device can be used in portable exposure condition without RF striction. Changes or modifications not approved by the party responsible for compliance could void the users authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



# MOVING THE MASSAGE CHAIR

- When moving the chair, one person should tilt the back and the other lift up the footrest to 45 degrees. Then push the chair forward via casters.
- The back should not be reclined too low in case of the chair falling down and causing damage and harm to property or persons.
- Please grasp the bottom of the side plate (not the base) with your hands and lift it up.
- Due to the heavy weight, the chair must be carried by two or more people. Also please be careful when handling to avoid back strain.

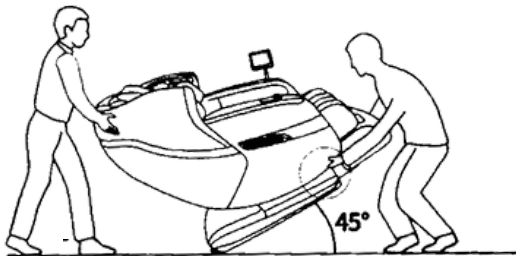

# MOVING THE MASSAGE CHAIR




## ATTENTION

- Do not drag or push the chair when it is not installed.
- Do not hold the plastic parts of the foot cover and power box for moving. Otherwise, it is easy to cause machine failure or personal injury.
- Do not move the chair when someone is seated. Otherwise, it may cause malfunction or personal injury
- Before moving the machine, please turn off the chair (backrest & footrest will go back to original position) and unplug the power cord. Otherwise, it may cause malfunction or personal injury.
- It is recommended to lay a cushion on the floor in case of scratching by casters when

## CHAIR PLACEMENT

- When placing your massage chair, be sure to leave 6 in. of space between the chair back and wall to allow it to recline safely.
- When using the massage chair, ensure there are no people, pets, or objects within 20 in. of the chair to allow the footrest to extend safely.

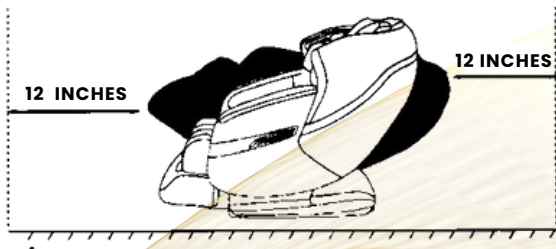

# CHAIR PLACEMENT




## ATTENTION


- Do not use in places with high humidity such as bathrooms or saunas.
- Please use on a flat and non-slippery ground.
- Do not use in a place with a lot of debris or dust, or a place with high surrounding temperature (above 40°C).
- Do not place the unit under direct sunlight or near high-temperature places such as heating appliances.
- Do not let flames such as cigarettes near the massage chair.

## Connecting the Power Cord

- Insert the power cord into the chair's power socket, then plug the cord into a grounded wall outlet.
- Turn the power switch to the ON ( ) position.

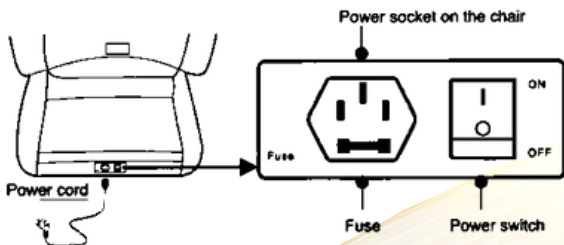

# CONTROLLER PANEL

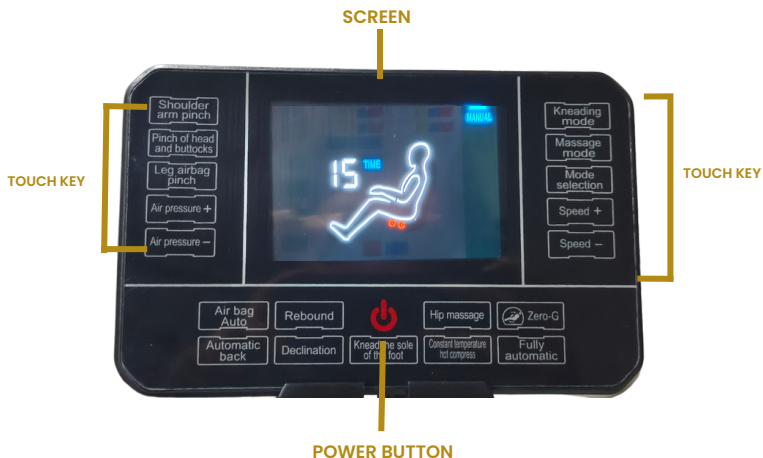

## Bluetooth & Music Function

- The Bluetooth speaker will be automatically on when the massage chair is turned on.
- Search and connect your mobile phone bluetooth device into the massage chair bluetooth device named " AMY 888 ". The user can see that the new Bluetooth device is successfully connected to the massage chair bluetooth speaker.


## NOTE

When the shutdown or timing time arrives, the massage chair enters the reset state, and the LCD display reset sign, all keys are invalid at this time.

# HOW TO USE



## 1. Turning On the Massage Chair

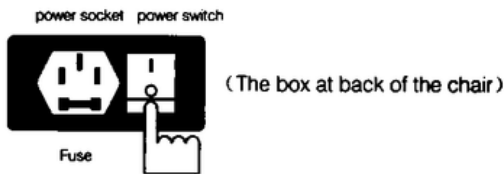First, be sure that the Power Switch is in the off "O" position. Then insert the power cable into the port of socket. Once firmly plugged in, proceed to plug the power cord into the outlet. Then flip the switch to the on "I" position, and the power switch should light up.



**A Warning: Do not insert or pull out the power plug with wet hands, otherwise an electric shock would happen.**

## 2. Starting your Massage

Sit in the chair, then press the power button  of controller panel to enter the full-automatic massage working state. The massage chair will be automatically check your body shape. The default timing is 15 minutes, and then press the power button  to turn off the whole machine.



**Automatic massage programs including the following massages. Each program massage different locations: foot, various movement of rollers in the back part of the body, beating, and airbag pressure.**

# HOW TO USE



KEY	FUNCTION
Power	Power On / Power Off and Time Adjustment
Shoulder & Arm Pinch	Turn On/ Turn Off the shoulder arm pinch massage.
Pinch of Head and Buttocks	Turn On/ Turn Off the head and hip airbag pinching massage.
Leg Airbag Pinch	Turn On / Turn Off the leg airbag pinching massage.
Air Pressure +	Increases air pressure
Air Pressure -	Decreases air pressure
Airbag Automatic	Turn On/ Turn Off all airbags
Kneading Mode	Turn On / Turn Off the neck kneading massage function
Massage Mode	Turn On / Turn Off the waist and back massage function
Mode Selection	Toggle the massage function of kneading forward or reverse.
Speed +	Increases the kneading massage.

# HOW TO USE

KEY	FUNCTION
Speed -	Decreases the kneading massage.
Automatic Back	Turn On / Turn Off the back massage.
Rebound	Rise up the angle of massage chair
Declination	Lay down the angle of massage chair
Kneading the Sole	Knead the sole of the foot
Hip Massage	Turn On or Turn Off the hip vibration
Constant Temperature Hot Compress	Turn on / Turn Off the constant temperature hot compress
Zero G	Recline and to reset the massage chair
Fully Automatic	Set five modes, and select Relaxing, Fatigue, Sleep, Recovery, Leisure

## 3. Adjust your Massage Time

When the massage chair is working, simply press the power button on the controller panel. The massage chair enters timed mode. You can now adjust your massage time from 15 minutes to 30 minutes with an interval of 5 minutes.

# HOW TO USE

## Fully Automatic Massage Function

1) In control panel press Fully Automatic Button. You can choose between from F1 to F5.

2) After pressing it, you will be entered into F1 mode in the automatic massage function. F1 mode is a massage program that is perfect for relaxing. Relaxing is specifically designed for people who want to relieve stress. It also helps your body by increasing endorphin levels, which helps you reduce body pain and tension.

3) Repeat the same process to enter F2 mode. F2 mode refers to the fatigue massage program. It is thoroughly designed for fatigued muscles to decrease their overall health, as this can lead to muscle weakness and injury. It will work on your upper back and neck, increasing oxygen, reducing muscle fatigue and maintaining healthy muscles.

4) Repeat the same process to enter F3 mode. F3 mode refers to the sleep massage program. It is meticulously designed to provide a restful night's sleep. This program relaxes your body and mind to achieve a good night's sleep by giving you a soft and relaxing massage.

5) F4 mode refers to the massage program for soreness. Thoughtfully designed to improve athletic recovery and performance, reduce stress, anxiety and muscle tension, treat chronic back pain and break up scar tissue. This type of massage applies heavy pressure onto muscles and deep tissues to relieve built-up knots and tension.

6) Lastly the F5 mode. F5 mode refers to the elderly massage program. Indulged with light, gentle massage and passive stretching to ease muscle tension without excessive friction on the skin. It helps the elderly to improve posture and alleviate arthritis pain and stiffness.

*\* Please wait the leg rest to return to its original position before standing up to avoid damaging the foot parts due to the whole body's weight. After using the massage chair, please turn off the power switch, and pull the power cord plug out from the power socket.*



# DAILY CARE AND MAINTENANCE



*After using the massage chair, please turn off the power switch, and pull the power cord plug out from the power socket*



## WARNING

Supervision and guidance is mandatory for those disabled mentally and physically. Please advise with your doctor before using the chair if you have ANY medical conditions. Children under 18 should not use the chair and consult with a doctor for approval if attempted. Do not operate the chair if there are any children or pets near by. Serious injuries may occur if those instructions are not followed.

# SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When the power cord is damaged, it must be changed from a special power cord available from the manufacturer or the service department. A

**Warning: Do not dismantle, modify, or change components by unauthorized person to avoid electric shock or fire.**

# DAILY CARE & MAINTENANCE

## STORAGE GUIDE

- Do not dismantle back of the chair. Electrical shock may happen when in touch with the inner elements of chair
- An unauthorized person must not dismantle the chair to avoid electric shock or fire.
- Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- Keep the massage chair clean and free of dust. Do not place the massage chair in a damp environment. © If not in use for a long period, please cover it with a cloth to free dust. © Do not place the massage chair under sunlight.

## MAINTENANCE

- Use neutral detergents only
- Use neutral detergents to clean the back cushion, head cushion, and leg cushion. Let it dry.
- Use detergent and cloth to clean the plastic, pipe and leather material of massage chair.
- Make sure not to use organic solvents as gasoline, amyl acetate, benzene for cleaning to avoid fading of the color, aging, or breakage.
- Do not spray pesticide to avoid electric shock or fire. © Please clean with dry cloth to avoid mechanical failure.

## TROUBLESHOOTING

Checking is necessary in frequent usage.

Make sure the machine work properly before usage, after not in use for long time.

ABNORMALITY SITUATION	SOLUTION GUIDE
Failure to start and indicator light is off	<ul style="list-style-type: none"><li>• Check that the plug is well connected</li><li>• Check if the switch on the chair is turned to "I" position</li></ul>
Sound in operation	<p><b>The sound is normal in following situation:</b></p> <ul style="list-style-type: none"><li>• Sound for kneading or knocking</li><li>• Sound changes after speed adjustment</li><li>• Sound from the box in massage</li><li>• Vibration sound for backrest in massage</li><li>• Sound for air input and output</li><li>• Sound for leg adjustment</li><li>• Sound for motor when the massage chair is loaded</li></ul>