

ZION EXECUTIVE

OPERATION MANUAL



ZION EXECUTIVE

PARTS DESCRIPTION



COLOR	Onyx Black
VOLTAGE	220 V
NW/GW	135 KG
MEAS	158.5 x 83 x 122 cm

SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using.

DANGER – To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.

WARNING – To reduce the risks of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts
- Close supervision is necessary when this appliance is used by, on, or near children, or disabled persons
- Use this appliance only for its intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by the supply cord or use the cord as a handle. Keep the cord away from heated surfaces
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Keep children away from the extended foot support
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unsupervised use of heat by children or disabled persons may be dangerous
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

SAFETY INSTRUCTIONS


GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock.

This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger-Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

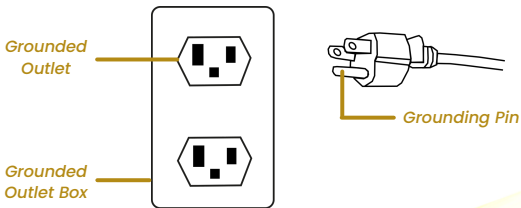

SAFETY INSTRUCTIONS

OPERATING SURROUNDINGS

Do not use or store the massage chair in a damp environment: i.e. bathroom, sauna, spa to avoid any mold, electric shock, fire or mechanical failure.

Do not use the massage chair outdoors.

Do not use the massage chair under dusty, smearable, or anoxic conditions.

Do not place the massage chair near a heater, stove, or near sunlight radiation to avoid inner components overheating and causing fire.

Make sure to place the massage chair on a flat level ground.

The bracket part should be placed on the plain ground.

To avoid electric shock, please make sure to connect an earth wire and have it grounded.

Don't use the machine while smoking.

FOLLOWING CONDITIONS SHOULD CONSULT DOCTORS BEFORE USE

- Suffered from malignant tumor
- Serious heart disease
- Serious skin disease
- Serious boned hyperplasia
- During pregnancy, be on the rest cure under the doctor's supervision
- If there is a bend in the back caused by an accident or disease
- Needing peaceful surroundings
- Arthritis Disease
- Implanted pacemaker for medical purpose
- Suffered from bowels disease (i.e. gastritis, enteritis, diarrhea, hepatitis)
- Serious blood circulation trouble
- Consciousness trouble
- In hyperpyretic












Children under the age of 18 or people with disabilities (physical and mental) are not allowed to operate the massage chair without a doctors consent to prevent cases of electric shock, injuries, or mechanism malfunctions.

SAFETY INSTRUCTIONS






For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted.

CAUTIONS

-  Non-professional technicians are not allowed to dismantle or repair the chair to avoid fire, electrical shock or serious harm.
-  Do not spray or directly pour liquids to the switch when cleaning to avoid insulation fault, electrical shock or short-circuiting.
-  When moving the chair in the process of storing or maintenance, be sure to disconnect the power plug from socket. Do not detach the plug with wet hands.
-  Make sure to shut off and detach the power plug when cleaning or storing product. During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock .
-  Do not place the machine onto an unstable surface to avoid roasting, insulation failure, electrical shock or turnover. When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking. Unexpected earthquake or external force may also cause damage or injury.
-  Clean power plug periodically to avoid fire due to dust.
-  Do not use it in any unsafe places or for other purposes. It is the main reason of product damage or accident.
-  Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.
-  The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

SAFETY INSTRUCTIONS

CAUTIONS

-  Do not store it near a fire or flammable substances. It is one of the reasons of causing product manipulation, deviation, or damage .
-  Should any abnormality occur(i.e. scorching smell), stop using immediately and detach power plug from socket. Operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance.
-  Only rated voltage must be used (220 V).
-  Be sure to keep children away during operating to avoid any hazard.
-  If the supply cord is damaged, it must be replaced by the manufacturer or its authorized persons for repair or maintenance to avoid any hazard.

SAFETY INSTRUCTIONS

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement. The device can be used in portable exposure condition without RF striction. Changes or modifications not approved by the party responsible for compliance could void the users authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

INSTALLATION GUIDE


Leg Rest Installation

- In order to install the footrest make sure that the connecting axis points of the footrest lines up with the seat base as shown in the diagram below. Once aligned tighten the "fixed screw". An install video will be available online for more detailed instructions. Once completed connect the electrical wire and air pipe as shown in the left illustration.
- As a final step make sure the air hose is not bent or twisted anywhere before zippering up the seat cushion to the leg rest.

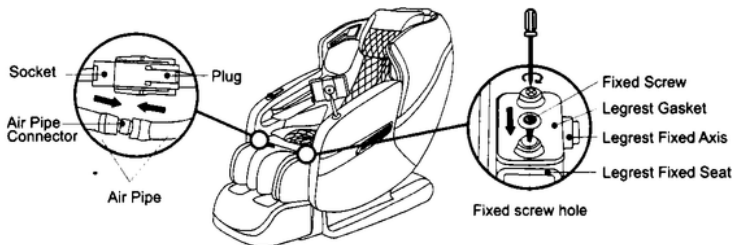

MOVING THE MASSAGE CHAIR

- When moving the chair, one person should tilt the back and the other lift up the footrest to 45 degrees. Then push the chair forward via casters.
- The back should not be reclined too low in case of the chair falling down and causing damage and harm to property or persons.
- Please grasp the bottom of the side plate (not the base) with your hands and lift it up.
- Due to the heavy weight, the chair must be carried by two or more people. Also please be careful when handling to avoid back strain.

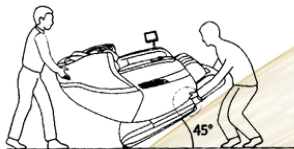

MOVING THE MASSAGE CHAIR




ATTENTION

- Do not drag or push the chair when it is not installed.
- Do not hold the plastic parts of the foot cover and power box for moving. Otherwise, it is easy to cause machine failure or personal injury.
- Do not move the chair when someone is seated. Otherwise, it may cause malfunction or personal injury
- Before moving the machine, please turn off the chair (backrest & footrest will go back to original position) and unplug the power cord. Otherwise, it may cause malfunction or personal injury.
- It is recommended to lay a cushion on the floor in case of scratching by casters when

CHAIR PLACEMENT

- When placing your massage chair, be sure to leave 6 in. of space between the chair back and wall to allow it to recline safely.
- When using the massage chair, ensure there are no people, pets, or objects within 6 in. of the chair to allow the footrest to extend safely.

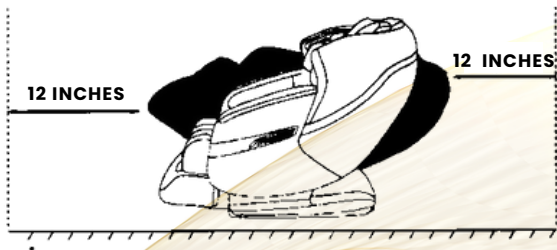

CHAIR PLACEMENT




ATTENTION


- Do not use in places with high humidity such as bathrooms or saunas.
- Please use on a flat and non-slippery ground.
- Do not use in a place with a lot of debris or dust, or a place with high surrounding temperature (above 40°C).
- Do not place the unit under direct sunlight or near high-temperature places such as heating appliances.
- Do not let flames such as cigarettes near the massage chair.

Connecting the Power Cord

- Insert the power cord into the chair's power socket, then plug the cord into a grounded wall outlet.
- Turn the power switch to the ON (I) position.

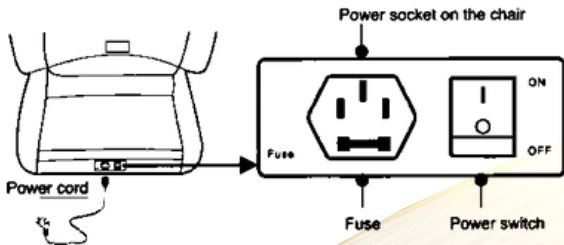

CONTROLLER PANEL

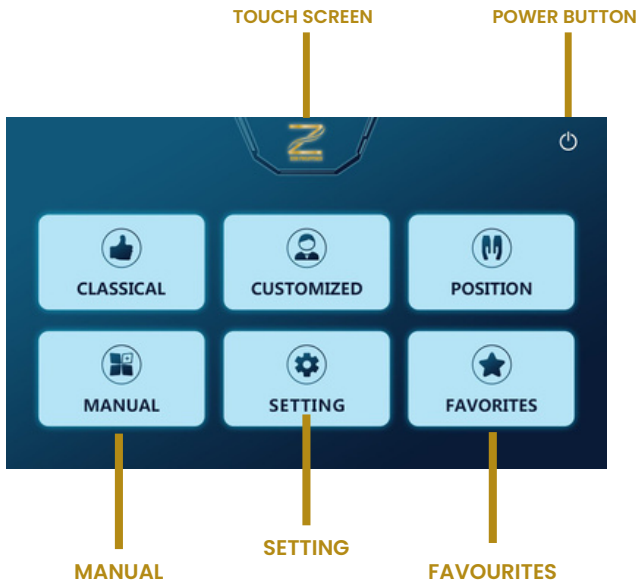

Bluetooth & Music Function

- Open your mobile device Bluetooth function and pair with the chair Bluetooth code "BK8000L" then you could play the music via speakers.


1)The connecting password for Bluetooth is "-----" if there is. The default setting is without password.

2)The Bluetooth speaker could only connect with one Bluetooth device at a time. Please turn off your Bluetooth device so others could enjoy it as well.

HOW TO USE

1. Turning On the Massage Chair

First, be sure that the Power Switch is in the off "O" position. Then insert the power cable into the port of socket. Once firmly plugged in, proceed to plug the power cord into the outlet. Then flip the switch to the on "I" position, and the power switch should light up.

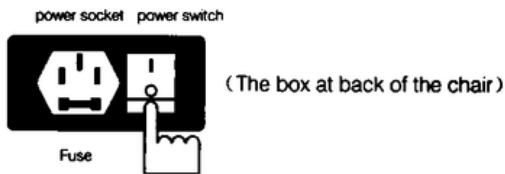

A Warning: Do not insert or pull out the power plug with wet hands, otherwise an electric shock would happen.

2. Starting your Massage


Sit in the chair, then press the power button of controller panel or in shortcut keys.

3. Choose your preferred massage program

Zion Executive has 24 massage programs that perfectly made and customized on what your body needs. After clicking the power button the massage chair will automatically scan your body shape.



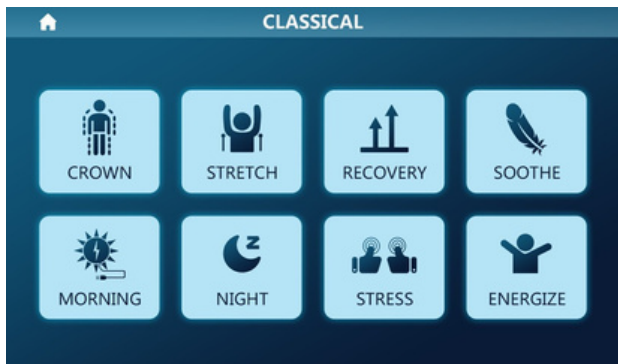


HOW TO USE

DIFFERENT MESSAGE PROGRAMS










HOW TO USE





DIFFERENT MASSAGE PROGRAMS

KEYS	NAME	FUNCTION
	CEO Massage Program	Massage program that can relieve the pain in your head, neck, back, arms, and legs because of all the day's work.
	House Wife Massage Program	Massage program that can relax and loosen the muscles that may be made sore by poor postures.
	Office Clerk Massage Program	Massage program that is suitable for people who want to relieve stress by increasing endorphin levels, which helps you reduce pain and discomfort
	Game Players Massage Program	Massage program that is suitable for people who want to ease their back aches, tired hands and also to relive their headache.
	Drivers Massage Program	Massage program that targets the deep tissue by applying pressure all over the body.

HOW TO USE

KEYS	NAME	FUNCTION
	Sports Man Massage Program	Massage program that targets the deeper layers of tissue and muscle. Relieve muscle tension and reduce soreness.
	Shoppers Massage Program	Massage program designed to keep the muscles flexible, strong, and healthy
	Home Body Massage Program	Massage program with kneading, tapping and full body air pressure massage with quicker speed.
	Crown Massage Program	Massage program with kneading, tapping and full body air pressure massage with slower speed.
	Stretch Massage Program	Slower-paced massage delivers a soothing intensity with full airbag massage.
	Recovery Massage Program	Massage program that applies heavy pressure onto muscles and deep tissues to relieve built-up knots and tension.
	Soothe Massage Program	Massage program that matches the natural shape of the spine in order to hit all areas of tension and realign the body from the neck down to the lumbar region.

HOW TO USE

KEYS	NAME	FUNCTION
	Morning Massage Program	Massage program that lowers blood pressure, decreasing inflammation, and increasing relaxation and digestive response.
	Night Massage Program	Massage program that can relax your body and mind to achieve a good night's sleep by giving you a soft and relaxing massage.
	Stress Massage Program	Massage program that increases endorphin levels has been correlated with quicker recovery and reviving the body from any pain and stress.
	Energize Massage Program	Massage program that works on your upper back and neck, increasing oxygen, reducing muscle fatigue and maintaining healthy muscles.

HOW TO USE

The Position tab allows you to choose which specific part of your body only needs a massage. There are 8 massage position that are exclusively available in Zion Executive.

POSITION TAB



In Position tab you will see the 8 massage position, there are:

Neck
Neck & Shoulder
Back Relief
Waist


Waist & Hip
Leg Relax
Upper Body
Lower Body

Every time you enter in any massage position program you can on the heating mode, leg rolling, air massage and add it to your favorites. Also, you can adjust the strength and massage time from 5 minutes to 35 minutes.

HOW TO USE

Message Strength Adjustment

In message status page, press the key [] to the message strength page.

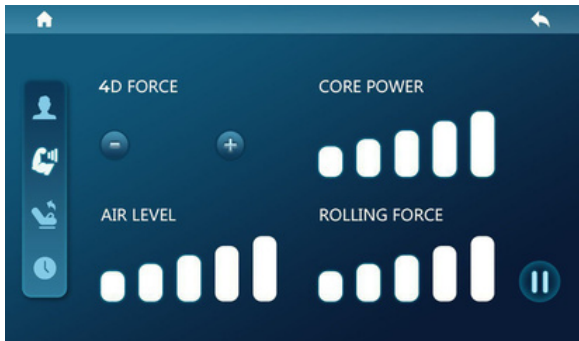

4D FORCE

4D force is an adjustment of the rollers speed. You can adjust it from one to 6 intensity that depends on what your body prefer.

CORE POWER

Core Power is an adjustment of the strength in the whole massage program. You can adjust it from one to five intensity that depends on what your body prefer.

AIR LEVEL


Air Level is an adjustment of the strength of airbags. You can adjust it from one to five strength that depends on what your body prefer.


ROLLING FORCE

Rolling force is an adjustment of the rollers strength. You can adjust it from one to five strength intensity that depends on what your body prefer.


HOW TO USE

Massage Chair Adjustment

In message status page, press the key [] to the chair controller.

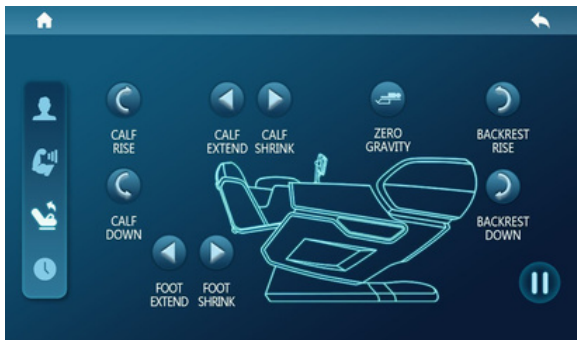

Massage Time Adjustment

In message status page, press the key [] to adjust the time.



Zion Deluxe can adjust the massage time from 5 minutes is the shortest massage time to 30 minutes as the longest massage time. Zion Deluxe massage time can adjust from 5 minutes to 30 minutes with 5 minutes interval.

DAILY CARE AND MAINTENANCE



After using the massage chair, please turn off the power switch, and pull the power cord plug out from the power socket



WARNING

Supervision and guidance is mandatory for those disabled mentally and physically. Please advise with your doctor before using the chair if you have ANY medical conditions. Children under 18 should not use the chair and consult with a doctor for approval if attempted. Do not operate the chair if there are any children or pets near by. Serious injuries may occur if those instructions are not followed.


HOW TO USE

Settings Function

Introduction of settings key function

Operation method:

Click the setting tab in home page panel to control the negative ion, to on the Bluetooth, to change the language, to on and off the key tone, and to adjust the dormancy and backlight.

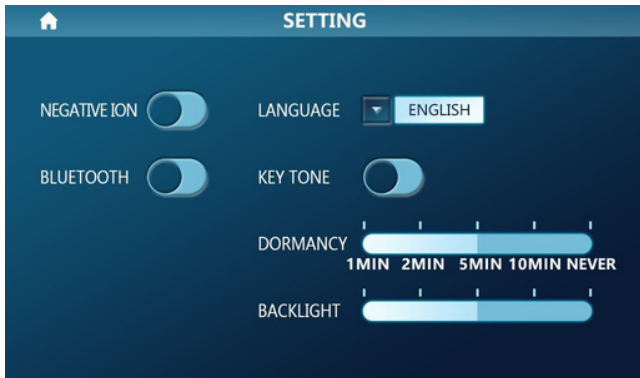

HOW TO USE

KEY	FUNCTION
Language	Choose different language
Backlight	Adjust the backlight brightness
Key tone	To On / Off the sound touch
Bluetooth	Bluetooth ON / OFF Button
Negative Ion	To activate the negative oxygen ion that help you to fell as sleep
Dormancy	To adjust the quality of how the massage chair works.

SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When the power cord is damaged, it must be changed from a special power cord available from the manufacturer or the service department. A

Warning: Do not dismantle, modify, or change components by unauthorized person to avoid electric shock or fire.

DAILY CARE & MAINTENANCE

STORAGE GUIDE

- Do not dismantle back of the chair. Electrical shock may happen when in touch with the inner elements of chair
- An unauthorized person must not dismantle the chair to avoid electric shock or fire.
- Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- Keep the massage chair clean and free of dust. Do not place the massage chair in a damp environment. © If not in use for a long period, please cover it with a cloth to free dust. © Do not place the massage chair under sunlight.

MAINTENANCE

- Use neutral detergents only
- Use neutral detergents to clean the back cushion, head cushion, and leg cushion. Let it dry.
- Use detergent and cloth to clean the plastic, pipe and leather material of massage chair.
- Make sure not to use organic solvents as gasoline, amyl acetate, benzene for cleaning to avoid fading of the color, aging, or breakage.
- Do not spray pesticide to avoid electric shock or fire. © Please clean with dry cloth to avoid mechanical failure.

TROUBLESHOOTING

Checking is necessary in frequent usage.

Make sure the machine work properly before usage, after not in use for long time.

ABNORMALITY SITUATION	SOLUTION GUIDE
Failure to start and indicator light is off	<ul style="list-style-type: none">• Check that the plug is well connected• Check if the switch on the chair is turned to "I" position
Sound in operation	<p>The sound is normal in following situation:</p> <ul style="list-style-type: none">• Sound for kneading or knocking• Sound changes after speed adjustment• Sound from the box in massage• Vibration sound for backrest in massage• Sound for air input and output• Sound for leg adjustment• Sound for motor when the massage chair is loaded